




**ISTRUZIONI DI MONTAGGIO
PROTEZIONI CARTER
CM037 SX**

**INSTRUCTION FOR ASSEMBLY
CRANKCASE PROTECTORS
CM037 SX**



Via Lavino 209/C - 40050 Monte San Pietro (BO) - Italy
Ph. +39.051.67.62.200 - Fax +39.051.67.62.202
www-for-racing.com
info@for-racing.com

WWW.FOR-RACING.COM

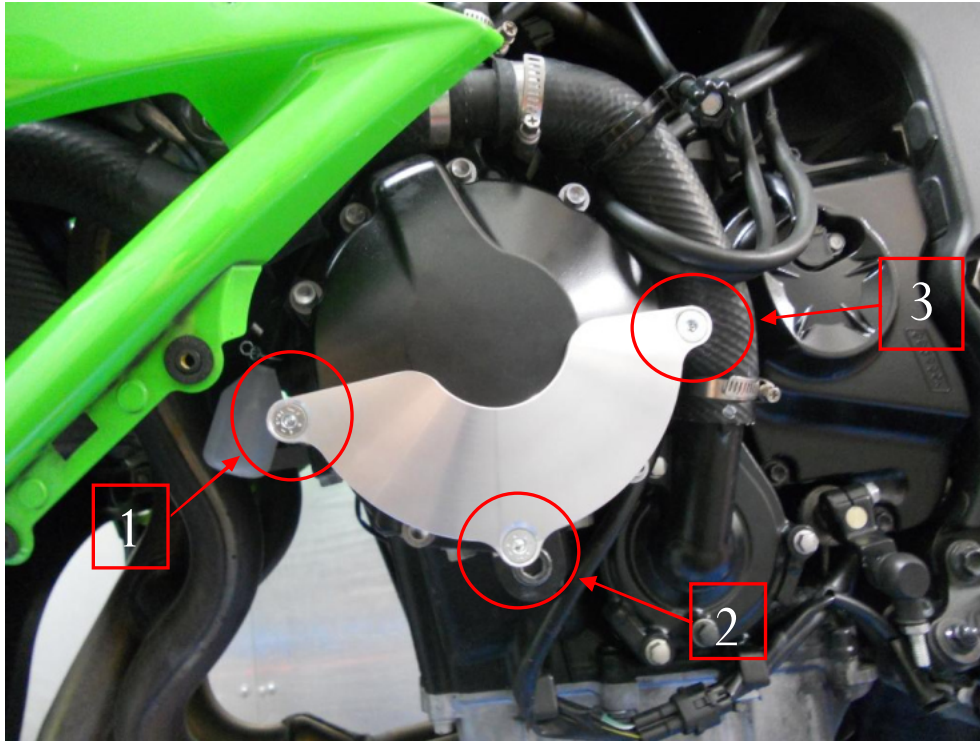

Dopo aver rimosso le viti originali, applicate il copri carter 4racing usando le viti e i distanziali dati in dotazione.

Foto 1 : Distanziale ≠ 18 con vite M6 x 55

Foto 2 : Distanziale ≠ 17 con vite M6 x 55

Foto 3 : Distanziale ≠ 15 con vite M6 x 55

Assicurarsi che le viti siano strette bene.

 ATTENZIONE

Tutti i prodotti For Racing sono realizzati per uso esclusivamente agonistico ed in circuito chiuso, vietato l'uso su strade pubbliche.



After removing the original screws, apply 4Racing crankcase cover using the screws and spacers supplied data.

Photo 1 : Spacer ≠ 18 with screw M6 x 55

Photo 2 : Spacer ≠ 17 with screw M6 x 55

Photo 3 : Spacer ≠ 15 with screw M6 x 55

Make sure the screws are tightened well.

 ATTENTION

All For Racing parts are intended for exclusive racing use on closet tracks. Their use on public highways and roads may be forbidden