



**ISTRUZIONI DI MONTAGGIO
FITTING INSTRUCTIONS FOR
TPS027
KAWASAKI Z 1000
11 - 12**




Via Lavino 209/C - 40050 Monte San Pietro (BO) - Italy

Ph. +39.051.67.62.200 - Fax +39.051.67.62.202

www-for-racing.com

info@for-racing.com

WWW.FOR-RACING.COM

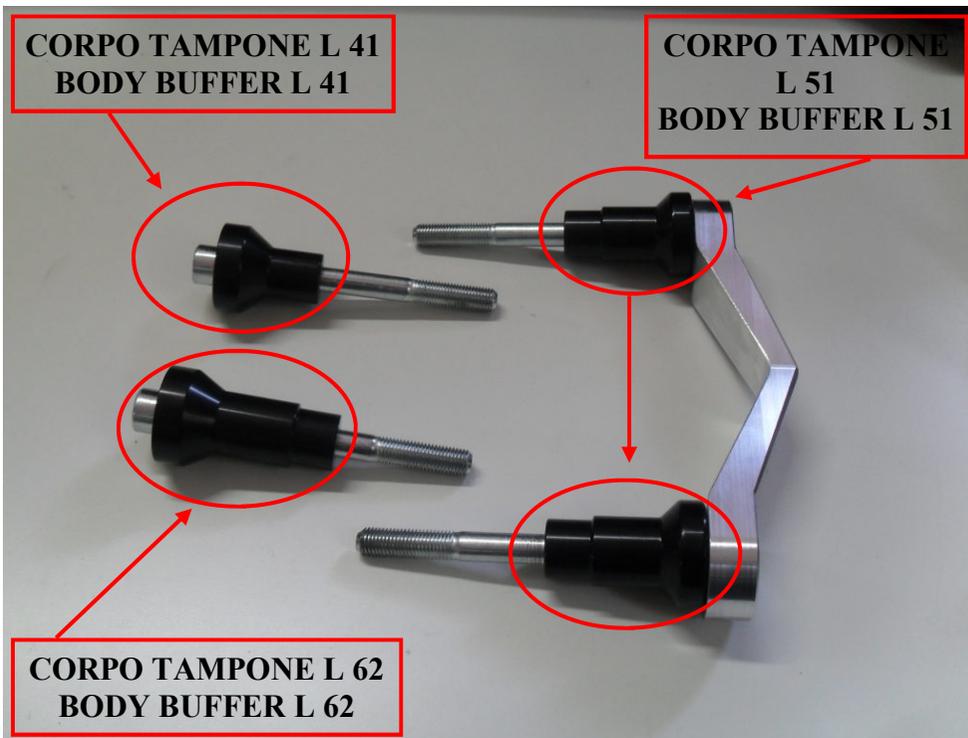

Per poter montare il tampone su staffa 4Racing, svitare i perni motore 1 per volta e avvitare il tampone su staffa.

Usare il tampone con i corpi tampone lunghi L 62 e L 41 dalla parte del volano.

Usare il tampone con i corpi tampone lunghi L 51 dalla parte della frizione.

Stringere bene il tutto.

 **ATTENZIONE**

Tutti i prodotti For Racing sono realizzati per uso esclusivamente agonistico ed in circuito chiuso, vietato l'uso su strade pubbliche.



To mount the bracket 4Racing buffer over, unscrew the bolts and screw motor 1 at a time on the pad bracket.

Use the swab with long bodies Buffer L 62 and L 41 from the flywheel.

Use the buffer with buffer length L 51 bodies from the clutch.

Tighten all.

 **ATTENTION**

All 4Racing parts are intended for exclusive use on closed circuit race tracks. The use on public highways and roads may be forbidden.